



**Part Number: M-6346612-M**  
**Part Description: GT350 Rear Seat Delete**  
**INSTALLATION INSTRUCTIONS**

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

Please visit [www.fordracingparts.com](http://www.fordracingparts.com) for the most current instruction information

**!!! PLEASE READ ALL OF THE FOLLOWING INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION.**

**AT ANY TIME YOU DO NOT UNDERSTAND THE INSTRUCTIONS, PLEASE CALL THE FORD PERFORMANCE TECHLINE AT 1-800-367-3788 !!!**

**Note: Procedure best done in warm environment to avoid fracturing interior trim panels.**

### **KIT INCLUDES:**

<u><b>Item #</b></u>	<u><b>Description</b></u>	<u><b>Qty:</b></u>
FR3Z-6360508-A	Rear Seat Delete Panel	1
W701125-S424	Screw	2
FR3Z-63116A66-A	Support	2
FR3B-6331048-ACW	RH Seat Belt Cover	1
FR3B-6331049-ACW	LH Seat Belt Cover	1
10144	Plastic Push-in	1
4521020	M10x20 Flange Bolt	6



Factory Ford shop manuals are available from Helm Publications, 1-800-782-4356


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

## Rear Seat Cushion

### Removal

1. **NOTICE:** The seat cushion tabs must be pressed in to release them from the floor. If the locking tabs are not pressed in, it may result in damage to the tabs.

Located at the front of the seat cushion, press in on the locking tabs to release the seat cushion from the floor.

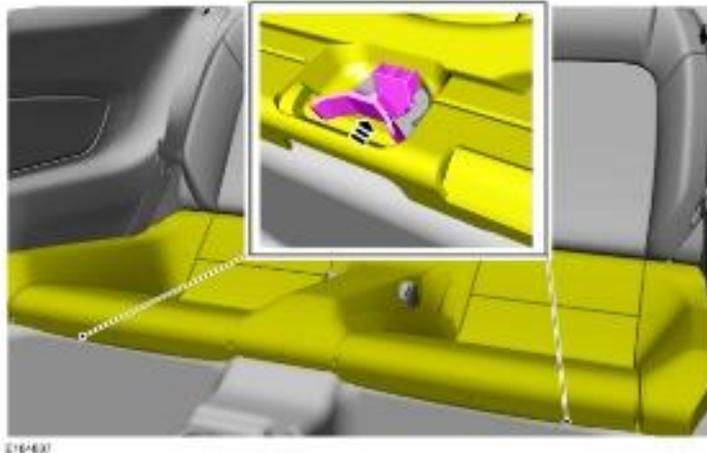

2. Lift and release the seat cushion. Remove the seat cushion.



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

## Rear Seat Backrest - Coupe

### Removal

**NOTE:** *LH seat shown, RH seat similar.*

1. Release the fastener attaching the seat backrest to the floor.



Remove floor stud  
both sides.

### Remove the backrest.

1. Release the backrest hinge from the pivot hinge.
2. Move the safety belt aside. Rotate the backrest toward the outboard side of the vehicle.
3. Lift the backrest to release it from the floor stud. Remove the backrest and floor stud.




NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

## Rear Safety Belt Buckle

### Removal

**NOTE:** *RH shown, LH similar.*

1. Remove the bolt and the safety belt buckle. Also the rear seat cushion mounting bracket.

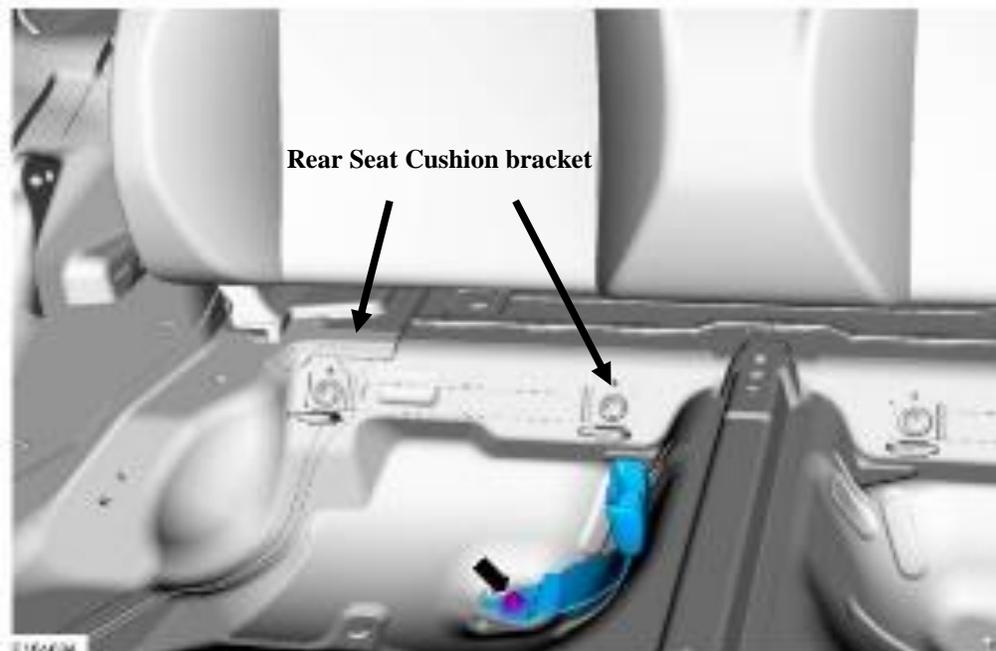

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

### Parcel Shelf - Coupe

#### Removal

1. On both sides, remove the load space trim panels.

### Load space Trim Panel - Coupe


#### Removal

**NOTE:** *RH* side shown, *LH* side similar.

1. Position aside the door weather-strip.




2. Release the clips and remove the scuff plate trim panel.

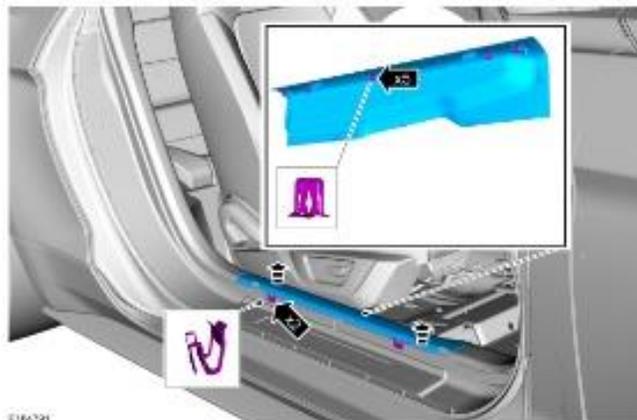

**Part Number: M-6346612-M**  
**Part Description: GT350 Rear Seat Delete**  
**INSTALLATION INSTRUCTIONS**

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

3. Position aside the safety belt guide, release the clips and remove the load space trim panel.

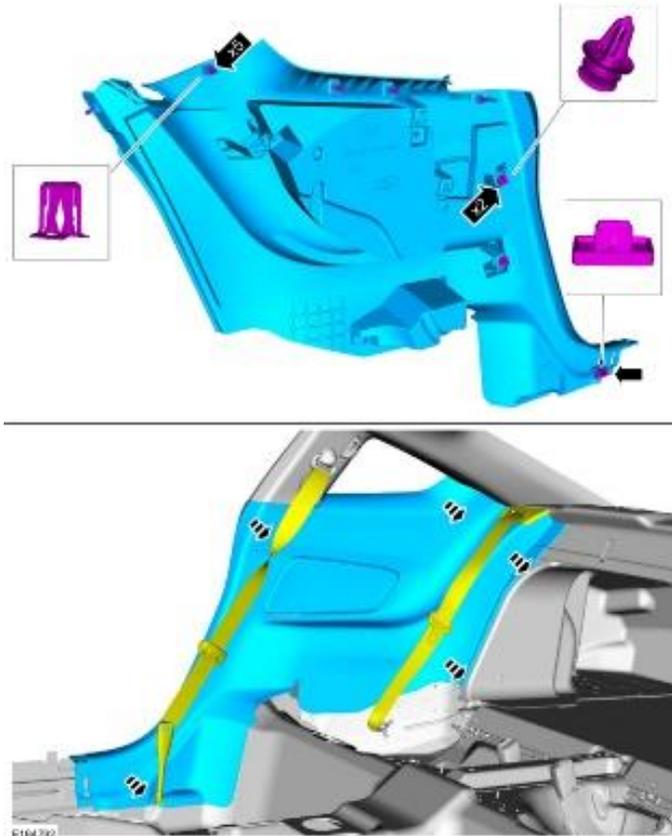

### Installation


1. To install, reverse the removal procedure.

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.


2. **NOTE:** *RH side shown, LH side similar.*

On both sides.

Release the clips, disconnect the tether clip and remove the D-pillar trim panel.

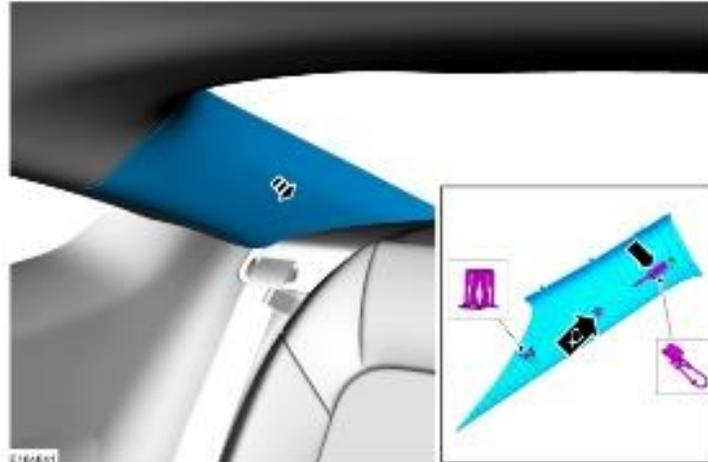

3. Remove the pin-type retainers and the parcel shelf.

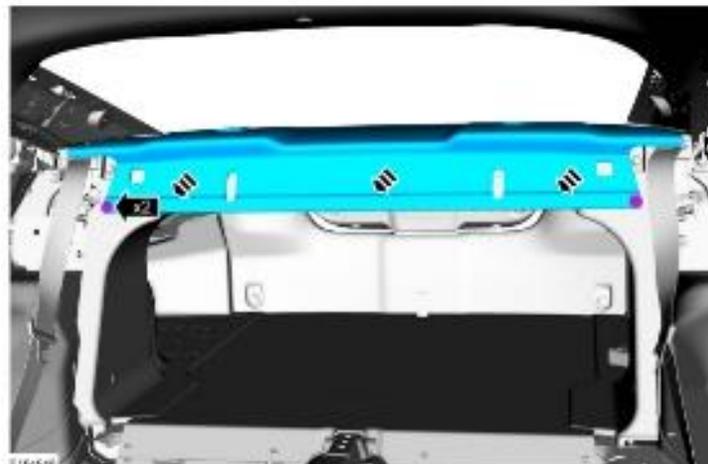

### Installation

1. To install, reverse the removal procedure.


NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

### Rear Safety Belt Retractor – Coupe

#### Removal

**NOTE:** *RH shown, LH similar.*

1. Remove the retainer and position the safety belt aside. Install supplied M10 bolt to plug hole.

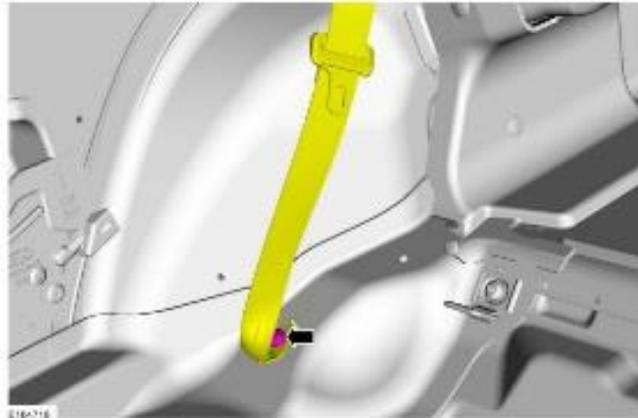

2. Remove the retainers and the safety belt retractor.



NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF FORD RACING PERFORMANCE PARTS.

### Rear Seat Delete Panel

1. Reinstall all trim panels including supplied seat belt covers.
2. Install the seat delete panel and mark the two upper holes onto the parcel shelf. Remove the delete panel and drill the two holes into the parcel shelf panel only.
3. Install the two supplied supports. Install the 4 remaining M10 bolts to plug holes, see below.



4. Install the seat delete panel using the supplied two bolts and one pushpin.  
Torque: 35 lb.ft (47.5 Nm)

