# **Intravee Quick User Guide (Firmware 5.31)**

## Single Line UI 2 – Business Tape/CD/Mini Disk

On the business head unit the Intravee uses a menu system with 4 way control;

Next – Press the ">" Key Previous – Press the "<" Key Select – Press the "SCAN" Key Cancel/Back – Press the "Rnd" key

When the Intravee first starts in single line UI mode it displays the text "Intravee", this is the first item on the top level menu. You can enter the source selection menu by pressing the SCAN key.

On the Source selection menu you may choose from Source 1, Source 2, Aux 1, Aux 2 and DAB. If you do not have DAB radio or KCA-410c/KCA-400c then select Source 1 by pressing the SCAN key.

You will now enter the device menu, the first item on the Device menu will display the type of device, iPod or CD Changer.

Scroll through the options using the < and > keys. You can search a CD by either Folder or Track and an iPod by Play list, Artist, Album or Song.

For example, to search by Artist use the < and > keys to select the Artist option, then press the SACN button, the first Artist on the iPod will be displayed. Use the < and > keys to select an Artist, the press the SCAN key to make the selection, the first track by that Artist will start to play. You can cancel Artist selection using the Rnd key.

You can view the ID3 information for the currently playing track by selecting the Now Playing option on the device menu. Pressing the SCAN button while on this menu will cycle through the Track Name, Album and Artist information, exit back to the device menu using the Rnd key.

For further information please check the Intravee web site and forum www.intravention.co.uk

# **Intravee Quick User Guide (Firmware 5.31)**

## Full Screen UI 5/6 - Navigation With Monitor

With the Professional Navigation system the Intravee makes full use of the monitor in either Full screen or Split screen mode as set from the Navigation settings menu.

Menu items can be selected using the right hand rotary button, turning the button changes the highlighted selection, pressing the button makes a selection.

You may change track (and folder if using the CHA-S634 CD Changer) directly by using the < and > buttons. When using the CHA-S634 CD Changer the <> (Tape Reverse) button changes between Folder and Track selection mode, a text indicator show either "Fo" or "Tr" to indicate the mode.

If you have a MK IV Nav computer with V24 or higher software then you can set the 'Enhanced' feature option from the set up menu and then enter a 'static' Now Playing screen by selecting the title of the Now Playing menu. When on the static Now Playing screen, press the rotary button to exit back to the normal Now Playing screen. If you are using an iPod you may also enter search for Album, Artist or song by highlighting the option on the Now Playing menu and clicking the rotary button.

If you are currently viewing the Nav map or the main BMW menu and use the MODE button to select the Intravee source then you will find that the screen switches back to the Nav map or menu screen after about 5 seconds. This is normal behaviour. To switch permanently to the Intravee screen, use the button with two overlapping rectangles, it's actually supposed to be a picture of a Tape indicating a switch to the Audio screen. This is a standard feature of the Navigation system, but one that many people do not use or know about, its function is more important with the Intravee than the standard BMW audio sources.

When in the standard search menu, you may change the Increment of the Forward 10 and Back 10 options by pressing and holding the Nav rotary button. The Increment may be set to 5, 10, 20 and 50 items.

Generally the top section of the screen displays information about the track currently playing, the bottom section is used for Intravee control. There are two exceptions:

- 1) When using combined search on the CHA-S634 the top section displays the Folder and Track being searched for.
- 2) The Now Playing 'menu' displays information about the currently playing track.

### **BMW Mini**

On the BMW Mini the 'Rnd' key on the Boost head unit is used to switch between the Standard Nav screens and the Intravee menus. The 'Rnd' Key is used as the Mini Navigation system has no dedicated key to switch between the Audio and Navigation screens.

For further information please check the Intravee web site and forum at www.intravention.co.uk