
## ONLY WORK ON THE EXHAUST WHEN COLD

- 1. Remove **one** (ONLY ONE) Allen screw and loosen the other all the way
- 2. Slip the collar over the actuator rod
- 3. Align the open screw hole
- 4. Install the other Allen screw using the provided tool
- 5. Set the position and tighten both screws (repeat other side)
- 6. Loosen the screws to readjust anytime

WWW.NAKIDPARTS.COM

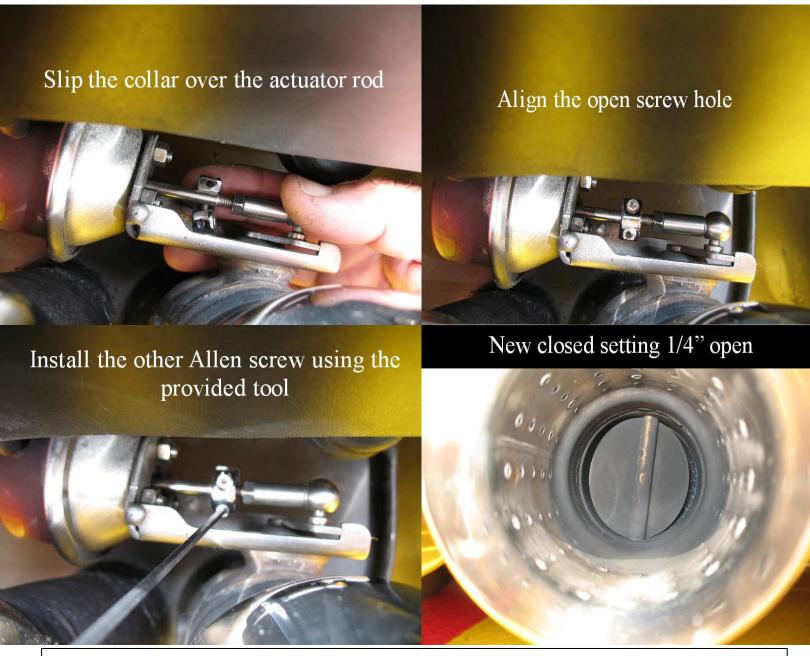

All installation and use of the products purchased from Nakidparts.com / LEEA Customs Inc. are done at the owners own risk. Nakidparts cannot be held responsible for any damage or injury caused by the installation or use of the products purchased here