EURO+DRIVE CLONE ECU - ALFA ROMEO 4C

INSTALLATION INSTRUCTIONS

Tools Needed: 10mm Wrench
Time Needed: 5min
Difficulty: 1/5

REMOVAL:

1. Locate battery (Upper left of engine bay) and disconnect ground via quick release latch

2. Locate ECU (Against rear firewall against physical trunk) and remove ECU Harness (push button and pull up swing arms while simultaniously pulling out side locking machanism)

3. Remove the (4) 10mm bolts securing ECU

INSTALLATION:

1. Install EURO+DRIVE CLONE ECU by re-inserting (4) 10mm bolts

2. Install ECU Harness by carefully seating clips and pushing in and down with swing arm and locking slide.
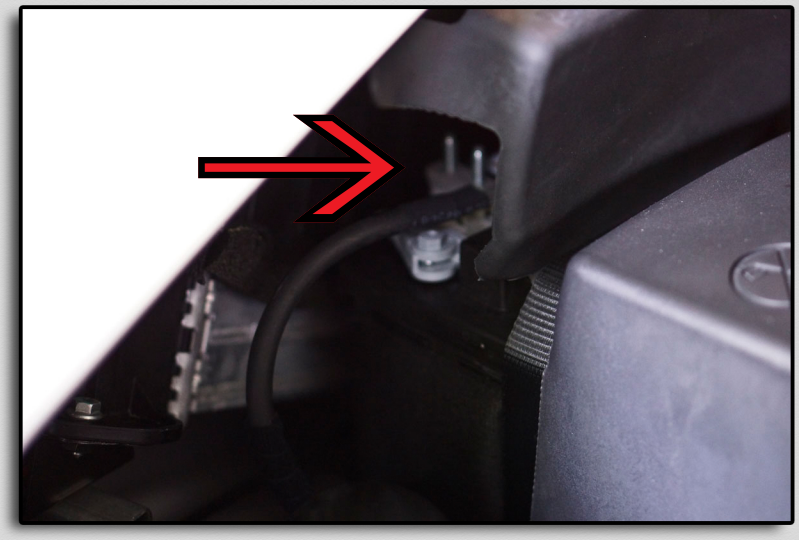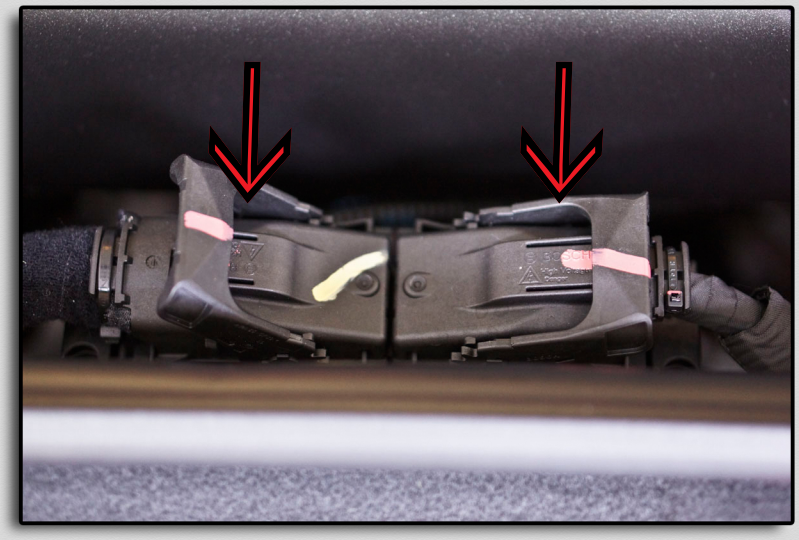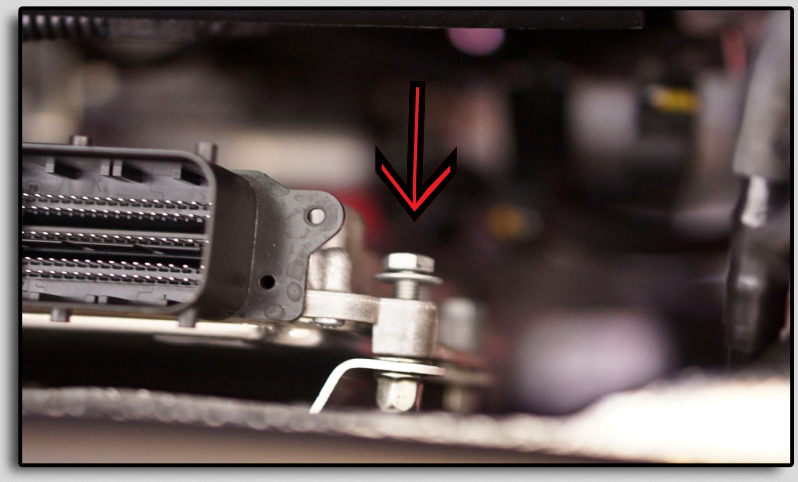
3. Connect battery ground